


Product: Plasma TV	Models: TH42PX60	Number: TT-08-32
Code: B62	Model Year: 2006	Date: June 24, 2008

PCB Designation: P Board

Part #: TXN/P1BJTUS

Symptom: AC cord plugged in, relay clicks then TV shuts down with power LED 10 blinks

Cause: No Vin supply to IC520 (power control IC) due to open R712 & shorted C527

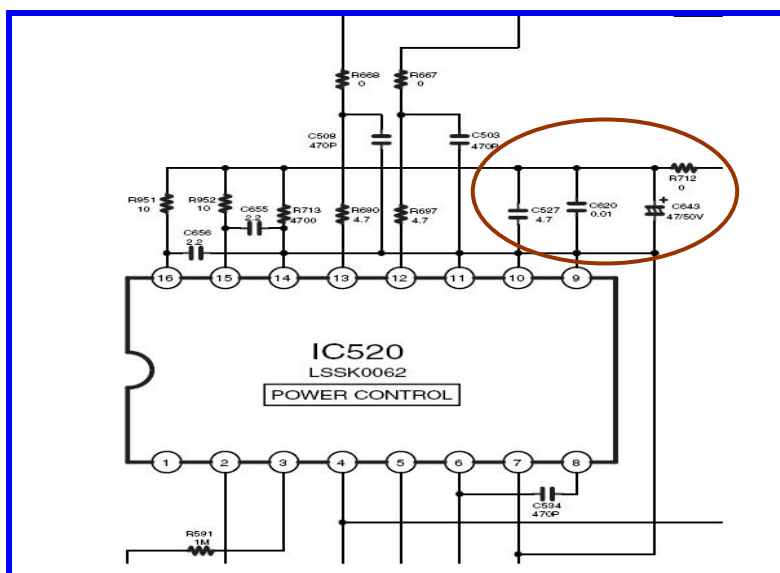

PARTS LIST:

1. R712:

PART #: [ERJ6GEYJ4R7](#)

2. C527:

PART #: [ECJ3YB1E475K](#)

Remedy: Replace R712 & C527

